


# Non-Penetrating Rooftop Walkway Grating Installation Guide with Rubber Connector 2.0

## Rubber Connector 2.0 Layouts


### For 1" & 1-1/2" deep square mesh molded grating

- 100 psf
- Deflection  $\leq 0.25"$
- The standard Rubber Connector 2.0 layout will meet or exceed industry standards for typical pedestrian loads.

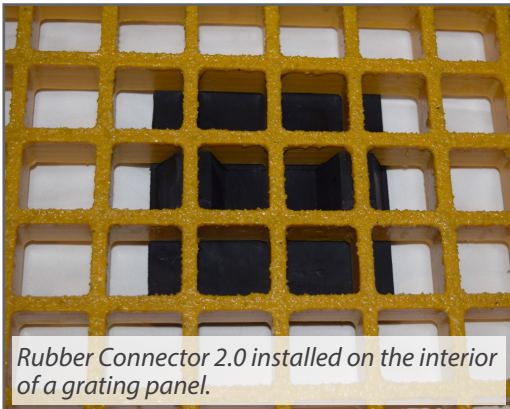


### 4' x 8' Grating Panels

11 Rubber Connector 2.0 Per Panel

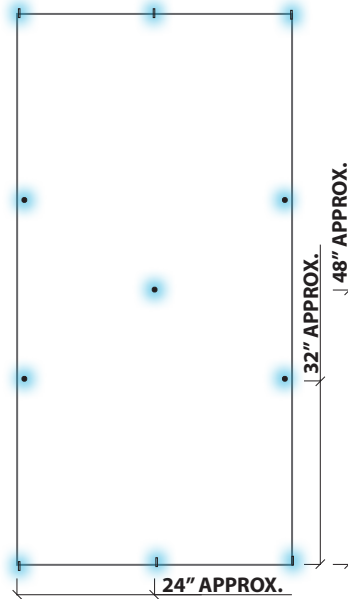


### 3' x 10' Grating Panels

10 Rubber Connector 2.0 Per Panel

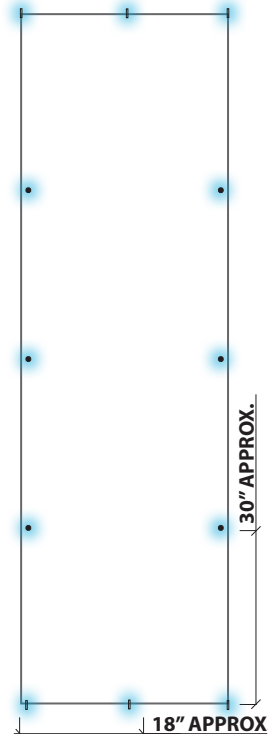


## Installation Instructions

1. Turn the molded grating panel upside down.
2. Use the diagram for the coordinating grating panel size and place the Rubber Connector 2.0 (PN 790053) onto the bottom of the molded grating and push into place.
3. Repeat for each dot in the diagram.
4. When connecting one panel to another, use three Rubber Connectors to join abutting edges with two on each panel end with the third centered. Reference the diagrams to the right for visual description.

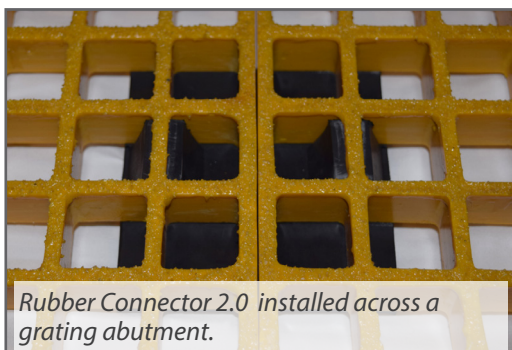

### 4' x 12' Grating Panels

15 Rubber Connector 2.0 Per Panel

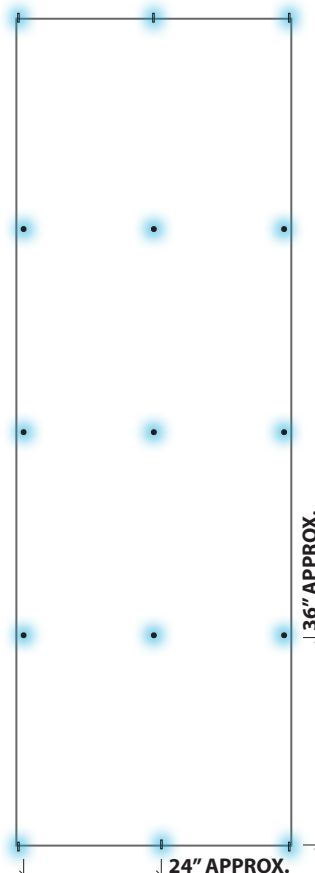

### 5' x 10' Grating Panels

12 Rubber Connector 2.0 Per Panel

